


User Manual For V3 1x17x22 Red Dot Sight

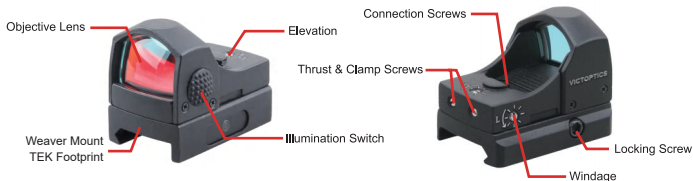

NEVER LOOK AT THE SUN THROUGH THE SIGHT (OR ANY OTHER OPTICAL INSTRUMENT). IT MAY PERMANENTLY DAMAGE YOUR EYES.

MAKE SURE FIREARMS ARE UNLOADED AND POINTED IN THE SAFE DIRECTION.

MOUNTING

The red dot sight is installed on the gun by means of its integrated weaver mount. Release the mount screws. Place the sight objective lens towards the muzzle. Set the sight flat on top of the rail base. Make sure the cross bolt is located in a recoil groove. For safety reasons, allow at least 3 inches of clearance between the sight and your eyes. After the sight is in place securely tighten the mount by locking the screw with a proper tool. Don't exceed 16 inches/pounds of torque on the mount's screws.

PRECISION ADJUSTMENT

The sight features elevation and windage adjustments. Referring to the point of impact you will need to adjust both windage and elevation screws. The elevation is the vertical (up and down) adjustment, usually on the top of the sight. Windage is the horizontal (left-to-right) adjustment, usually on the right of the sight.

With the sight is mounted aim at a target 50 yards away. Slowly shoot a small 3 to 5 round test group onto your target. Adjust windage & elevation screws in the direction you want to move the bullet impact. Should your impacts be below your point of aim, dial UP to reach zero. Should your impacts be left to your point of aim, dial R(right) to reach zero? Each adjustment moves the point of impact. Shoot another 3 to 5 round test group. Repeat until you are satisfied with the point of aim.

BATTERY EXCHANGE

Your sight illumination is powered by 1 piece of CR2032 lithium button battery. To insert, remove or replace the battery: Use the proper tool to release the battery compartment cover. Remove the used battery from the battery compartment. Insert a new one from a reputable manufacturer with the positive (+) side UP. Screw on the battery compartment cover. Caution: Should the illumination grows dim or not turn on, you will need to exchange the battery.



ACTIVATE THE RED DOT SIGHT

Press the illumination switch to activate the sight. Subsequently press the switch will change the dot intensity. The 1st level is the weakest and the 6th level is the brightest.

MAINTENANCE

Your sight, though amazingly tough, is a precision instrument that deserves reasonable cautious care.

- When cleaning the lens, first blow away any dirt and dust, or use a soft lens brush. Fingerprints and lubricants can be wiped off with lens tissue, or soft microfiber clean cotton cloth, moistened with lens cleaning fluid.
- All moving parts of the sight are permanently lubricated. Do not try to lubricate them.
- No maintenance is needed on the sight's external surface, except to occasionally wipe off dirt or fingerprints with a soft cloth.
- Use lens covers whenever convenient.

STORAGE

Avoid storing the sight in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet, or a closet is preferable. Never leave the sight where direct sunlight can enter either the sight lens.

 **VICTOPTICS**



WWW.VICTOPTICS.COM